



## Installation Instructions


### Wrangler Guard Part # 13173B

### 2015-2016 Chevrolet Silverado 2500HD & 3500HD 2/4WD

(Excludes models with Driver Alert Package & Park Assist)

#### Parts List

Item	Qty.	Part #	Description	Torque
1	1 Pr.	575794AA	Upper Bracket	
2	1 Pr.	574794BA	Lower Bracket	
3	10		1/2" x 1 1/2" Hex Bolt	65 ft. lbs.
4	10		1/2" Flat Washer	
5	10		1/2" Lock Washer	
6	10		1/2" Hex Nut	

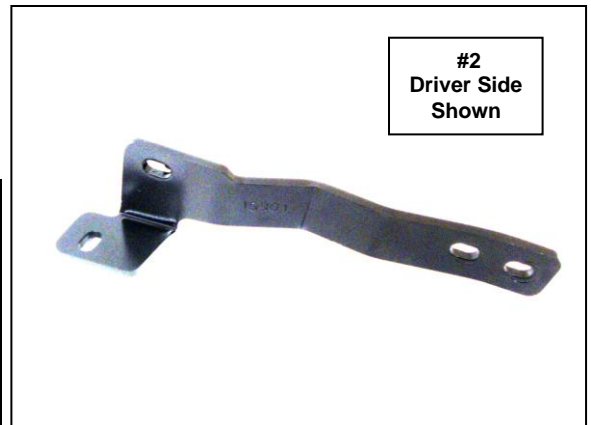

#### Assembly & Installation Tools Required

- 10mm, 18mm & 3/4" Socket
- 18mm & 3/4" Wrench
- Phillips & Flat Blade Screw Driver
- Ratchet & Ratchet Extension

**Approximate installation time: 60 min**

### IMPORTANT INSTALLATION NOTES AND SUGGESTIONS

If equipped with Driver Alert Package & Park Assist, installation of this grille guard will interfere with the function.



To maintain and care for this product keep it clean and do not use abrasive cleaners or polish waxes. Texture Painted Finish: Mild liquid detergent may be used. Polished Stainless & Semi-Gloss Painted Finishes: We recommend using only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.

Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer service at: (888) 427-4466 or email: sales@gorhino.com

## Installation Instructions



**Step-1** Begin by removing the nut bolts and tow hook from the driver side frame, **(Photo 1 & 2)**.

**Note:** The tow hook will be reinstalled.

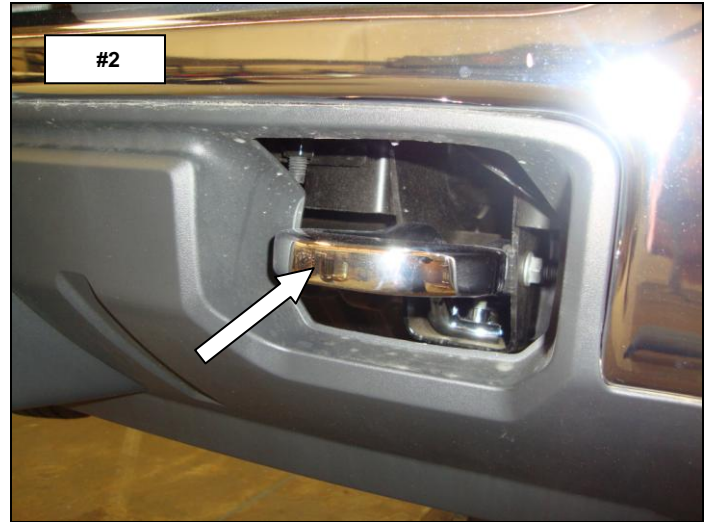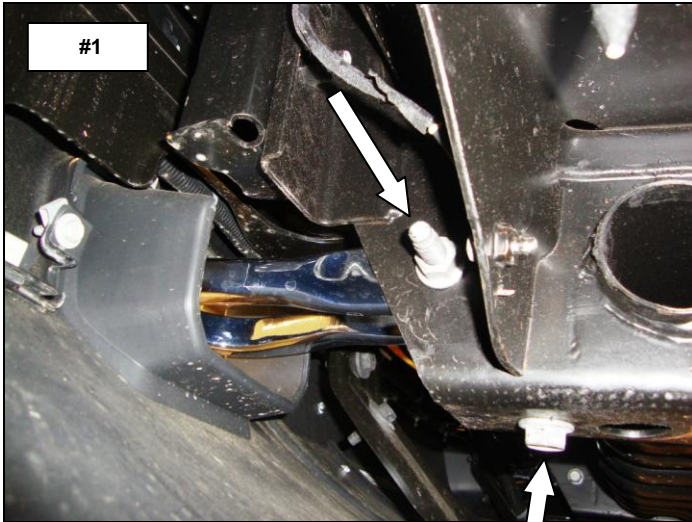



**Step-2** From behind the bumper valance, position the driver side lower bracket so the leg of the bracket extends out through the tow hook opening, then rotate and align the bracket with the side and bottom of the frame. Reposition the tow hook inside the frame, align the lower bracket and tow hook with the holes in the frame and reinstall the tow hook bolts and nut, **(Photo 3 & 4)**. Leave the nut and bolts loose for final adjustment. Repeat the above steps to install the passenger side lower bracket.

**Note:** If your vehicle is not equipped with factory tow hooks, attach the lower brackets to the frame using the 1/2" x 1 1/2" hex bolts, flat washers, lock washers and hex nuts supplied.

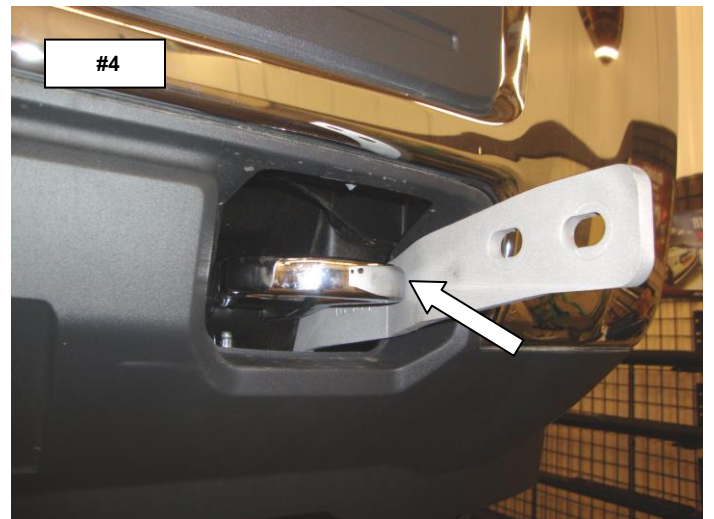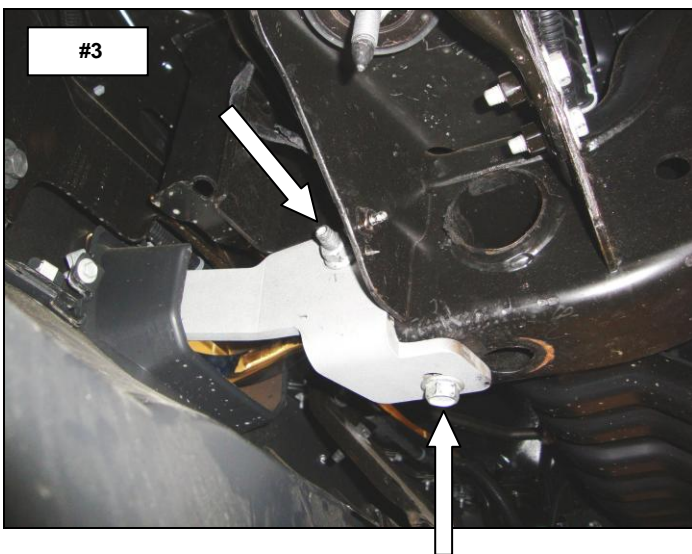



**Step-3** Open the hood and locate the (12) plastic push pins (6) per side securing the radiator cover. Using a flat blade screw driver, pull the head of the push pins up, remove push pins and lift radiator cover off. This will allow access to the bolts securing the top of the grille, (**Photo 5**).

**Step-4** Remove the (4) screws (2) per side securing the top of the grille, (**Photo 6**).

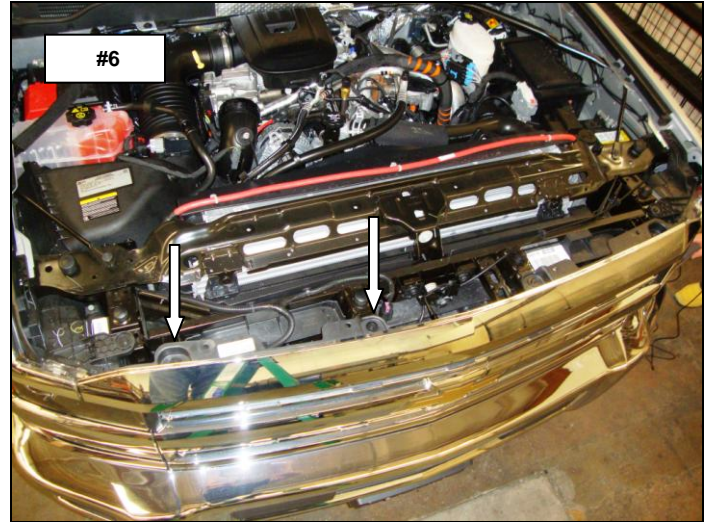
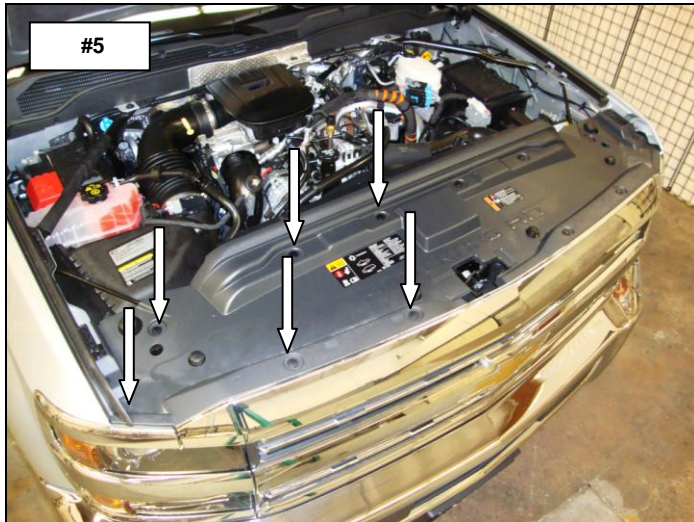


**Step-5** Working from one side gently pull outward to unsnap the clips and remove the grille, (**Photo 7**).

**Step-6** Locate and remove the bolt connecting bumper to the bumper bracket and bolt connecting the bumper bracket to the frame on the driver side of the vehicle, (**Photo 7 & 8**).

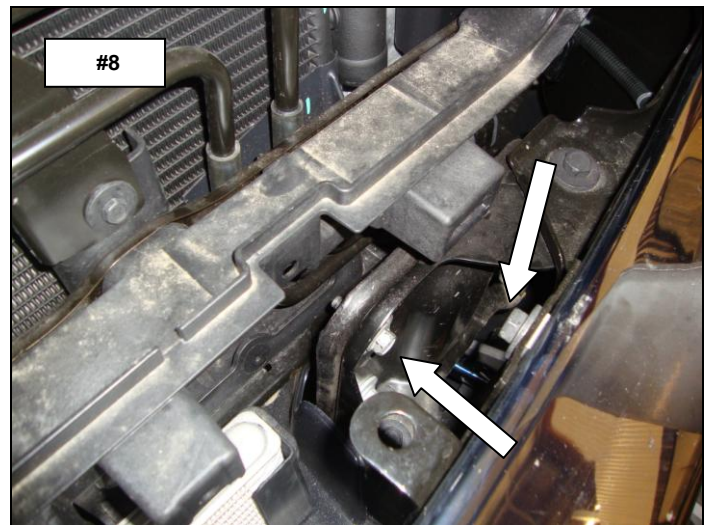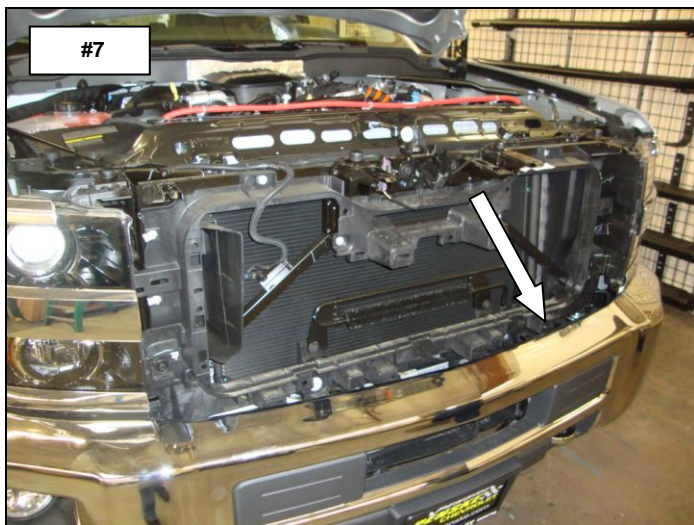


**Step-7** position the driver side upper bracket behind the bumper, align the bracket with the hole in the bumper and bumper frame bracket then reinstall and tighten the bolts, **(Photo 9 & 10)**. Repeat the above steps to install the passenger side upper bracket then reinstall the vehicle's grille, radiator cover.

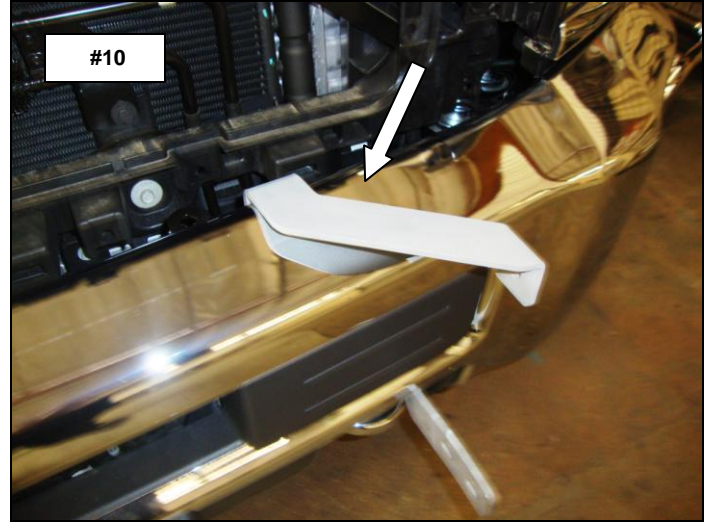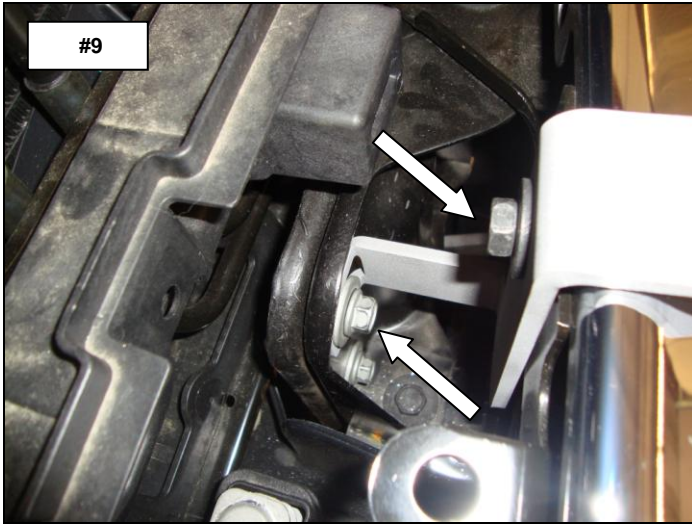

**Step-8** Position the grille guard up to the brackets and attach the grille guard to the outside of each bracket using the 1/2" x 1 1/2" hex bolts, 1/2" flat washers, 1/2" lock washers and 1/2" hex nuts supplied, **(Photo 11)**.

**Step-9** Align the grille guard with the vehicle and tighten the factory and supplied nuts and bolts, **(Photo 12)**.

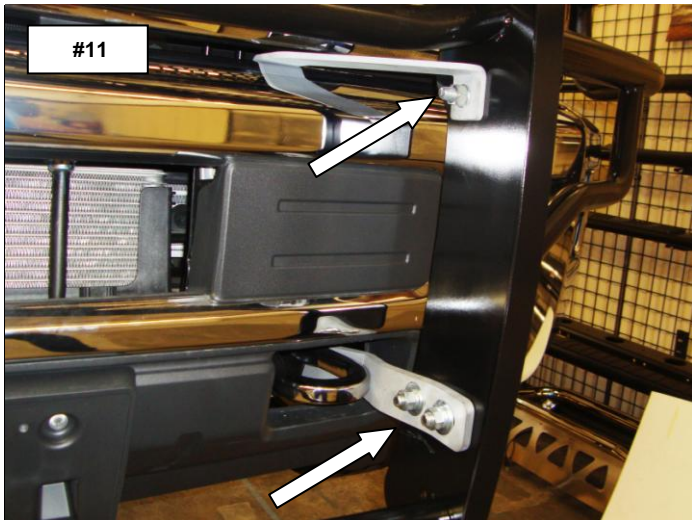

**Step-10** Remember to check and retighten all nuts and bolts hardware periodically.