

D44043	CHEVROLET SILVERADO & GMC SIERRA	1500 Double Cab	2014 - 2015
	CHEVROLET SILVERADO & GMC SIERRA	2500HD & 3500HD Double Cab (Gasoline Only)	2015


Parts List					Required Tools (Not included)	
Item	Qty.	Code	Description	Max. Torque	Qty.	Description
	1 Kit	BRK-D44-203	Kit de brackets	-	1	1/2" Socket & 1/2" Wrench
1	4 Set	D44-2030AA	driver's side bracket / passenger side bracket	-	1	13mm Socket & 13mm Wrench
					1	Ratchet
					1	Extension
	1 Kit	KTE-D44-201A	Hardware bolts kit	-	Product Image	
2	16 Piece	-	5/16" Hex head bolt.	11 Lb.ft		
3	32 Piece	-	5/16" Lock washer.	-		
4	8 Piece	-	M8 P1.25 Hex nut.	-		
5	16 Piece	-	M8 x 25mm P1.25 Hex. Head bolt.	20 Lb.ft		
6	8 Piece	-	M8 P1.25 Clip nut.	30 Lb.ft		
7	20 Piece	-	3/8" Flat washer.	-		
8	20 Piece	-	5/16" Flat washer.	-		
9	1 Set	-	Oval side bar widesider 4" (Passenger / Driver).	-		

Instructions

- 1.- Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
- 2.- To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. We recommend to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
- 3.- The approximate installation time is 45 min.
4. For **DOUBLE CAB** models, locate in the Front , Midle and Rear in the rocker panel of the vehicle the hole ,there are you place the front and rear bracket.SEE PHOTO 1 .Only the front has threaded hole and nut , PHOTO 2

PICTURE 2

Image shown is for front and center.

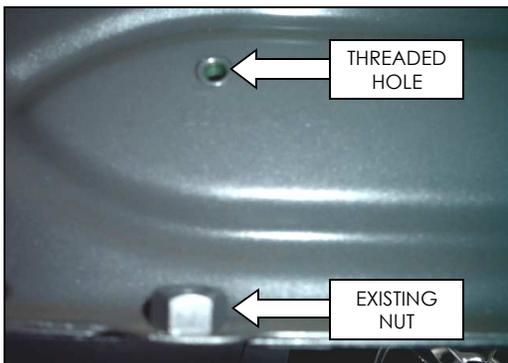

PICTURE 1



Location of bracket

5. Inserting into the holes a M8 clip nut. **PHOTO 3.** Place the bracket and attach according to the **PHOTO 4.**

PHOTO 3

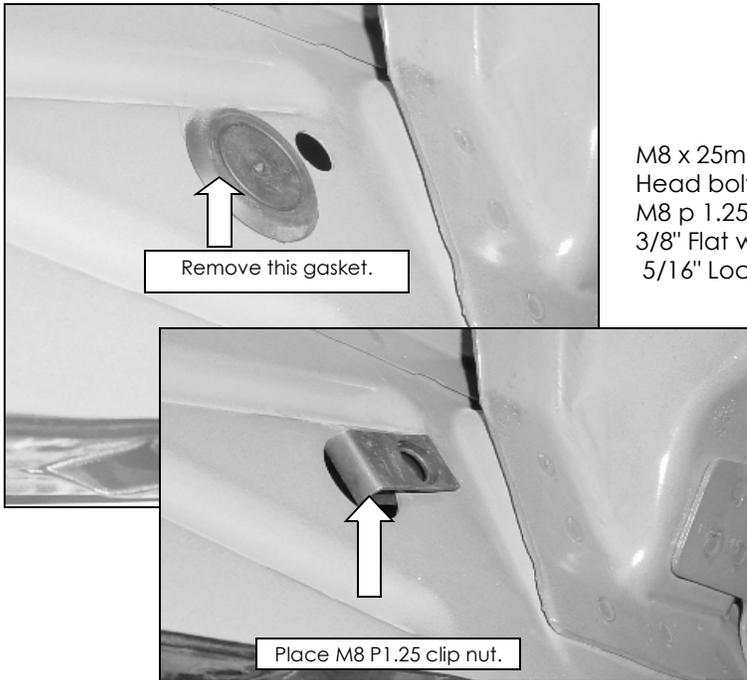


PHOTO 4

M8 x 25mm P1.25 Hex. Head bolt.
M8 p 1.25 hex. nut.
3/8" Flat washer.
5/16" Lock washer.



6. Place in the front bracket and fix as shown in the, **PHOTO 5** Repeat for the opposite side.

PHOTO 5

(1) M8 hex bolt,
(1) 5/16" flat washers,
and (1) 5/16" lock washer

(1) M8 hex bolt,
(1) 5/16" lock washer
and (1) 3/8" flat washer



7. Oval side bar 4", place on brackets and attach with: 5/16" hex head bolt, 3/8" Flat washer, and Flat lock 5/16" **PHOTO 6** Repeat for the opposite side. Leave loose.

8. Align Running board Oval side 4" and then tighten all bolts.


9. Periodically check your product because it may need a re-tighten of bolts.

10. Fill the warranty card and place it inside your vehicle's glove box.

PHOTO 6

OVAL SIDE BAR 4" INSTALLATION

5/16" hex head bolt,
3/8" Flat washer, and
Flat lock 5/16"

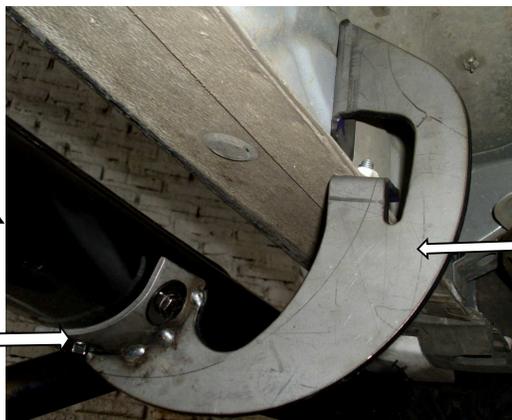

BRACKET