

Installation Instructions


DOMINATOR D4 DUAL-STEP Part # D44108

2010-2014 Dodge Ram 2500 & 3500 Crew Cab


Parts List

Item	Qty.	Part #	Description	Torque
1	4	D44-2240CA	Front & Center Bracket	-
2	1 Pr	D44-2240DA	Rear Bracket	-
3	1 Pr	D44-2242AA	Front Auxiliary Bracket	-
4	1 Pr	D44-1082BA	Center Auxiliary Bracket	-
5	1 Pr	D44-1082AA	Rear Auxiliary Bracket	-
6	6	372240BA	3/8" T-Plate	-
7	2	370200AA	3/8" T-Bolt	-
8	12	-	5/16" x 1" Hex Bolt (black)	15 Ft. Lbs.
9	12	-	5/16" Lock Washer black)	-
10	12	-	3/8" 1" Hex Bolt	30 Ft. Lbs.
11	20	-	3/8" Flat Washer	-
12	20	-	3/8" Lock Washer	-
13	8	-	3/8" Hex Nut	30 Ft. Lbs.
14	6	-	3/8" 1" Carriage Bolt (black)	30 Ft. Lbs.
15	18	-	3/8" Flat Washer (black)	-
16	6	-	3/8" Lock Washer (black)	-
17	6	-	3/8" Hex Nut (black)	30 Ft. Lbs.
18	8	-	Vinyl Gasket	-
19	1 Pr	D441060AA-BA	Dominator 4 Side Step	-

1

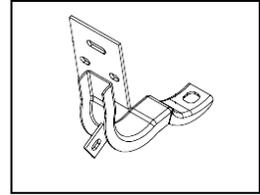


2 Passenger

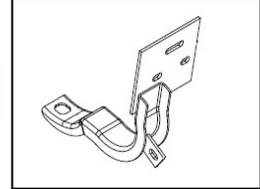


3 Passenger



4 Passenger

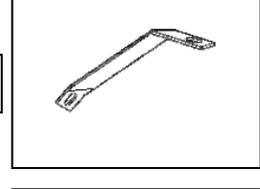

5 Passenger

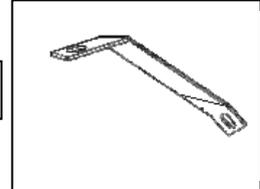


Tool Required:


- 1/2", 9/16" & 18MM Socket
- 1/2", 9/16" & 18MM Wrench
- Ratchet & Ratchet Extension

Approximate Installation Time: 60 min

6

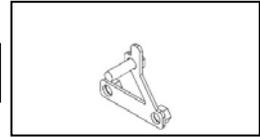

7




Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact **Go Rhino Products** for fast, friendly customer service at: 1-888-427-4466 or email: warranty@gorhino.com

Installation


Step-1 Begin the installation on the passenger side of the vehicle.

Step-2 Locate the obround hole covered with tape and (2) hexagon holes in the body panel at the front of the cab. Remove the tape covering the obround hole and install (1) 3/8" T-Plate in the body panel and install (1) vinyl gasket over the threads to prevent the T-Plate from falling into the body, (**Photo 1**).

Step-3 Attach one of the front mounting brackets to the body panel using the 3/8" T- Plate, (2) 3/8" x 1" hex bolts, (3) 3/8" flat washers, (3) 3/8" lock washers and (1) 3/8" hex nut, (**Photo 2**). Leave the nut and bolts loose for final adjustment.


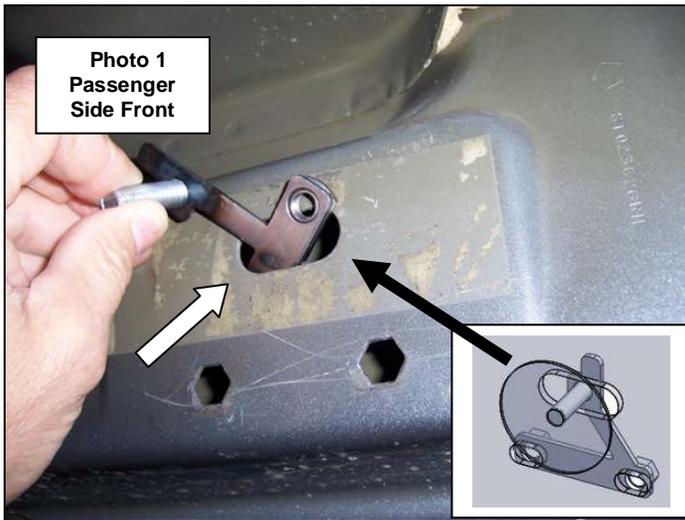


Step-4 Repeat the above steps to install the passenger side center and rear brackets, (**Photo 3 & 4**).

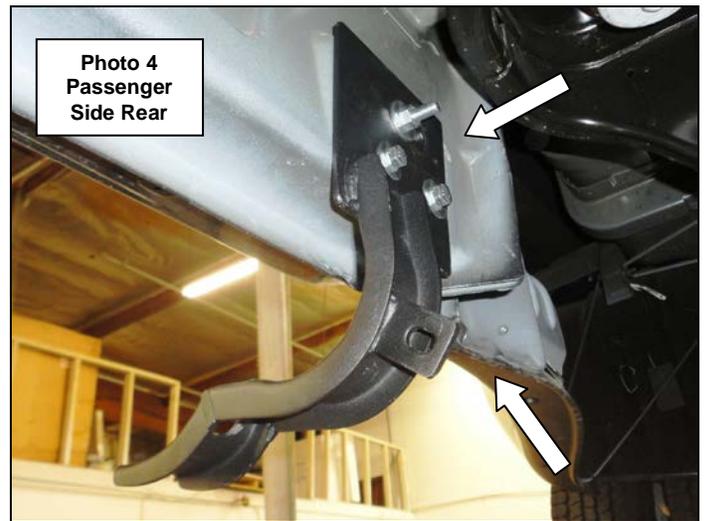



Step-5 Locate the square hole in the underside of the body toward the front of the vehicle, and install (1) 3/8" T-Bolt in the body and install (1) vinyl gasket over the threads to prevent the T-Bolt from falling into the body, **(Photo 5)**.

Step-6 Attach the passenger side front auxiliary bracket to the underside of the body using the 3/8" T-Bolt, (1) 3/8" flat washer, (1) 3/8" lock washer and (1) 3/8" hex nut, and to the front bracket tab using (1) 3/8" x 1" carriage bolt (1) 3/8" flat washer, (1) 3/8" lock washer and (1) 3/8" hex nut, **(Photo 6)**. Leave the hex nuts and bolt loose for final adjustment.

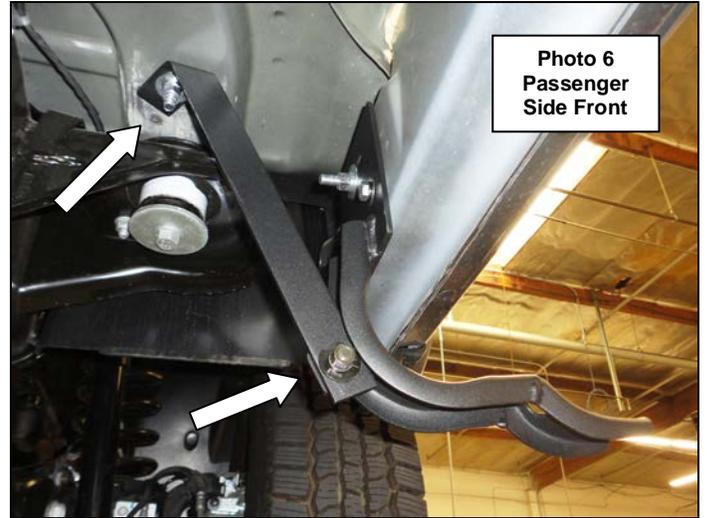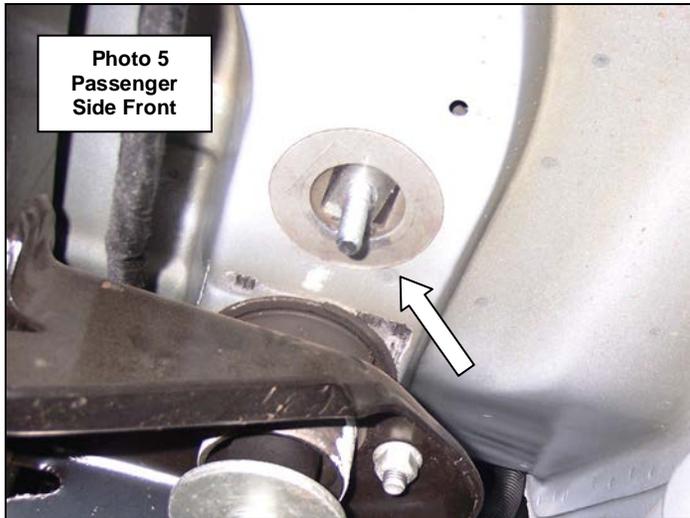


Step-7 Locate and remove the passenger side center factory body mount bolt and washer, **(Photo 7)**.

Step-6 Insert the factory body bolt and washer through the slot hole in the passenger side center auxiliary bracket, reinstall the body mount bolt and attach the opposite end of the auxiliary bracket to the center bracket tab using (1) 3/8" x 1" carriage bolt, (1) 3/8" flat washer, (1) 3/8" lock washer and (1) 3/8" hex nut, **(Photo 8)**. Leave the nut and bolts loose for final adjustment.

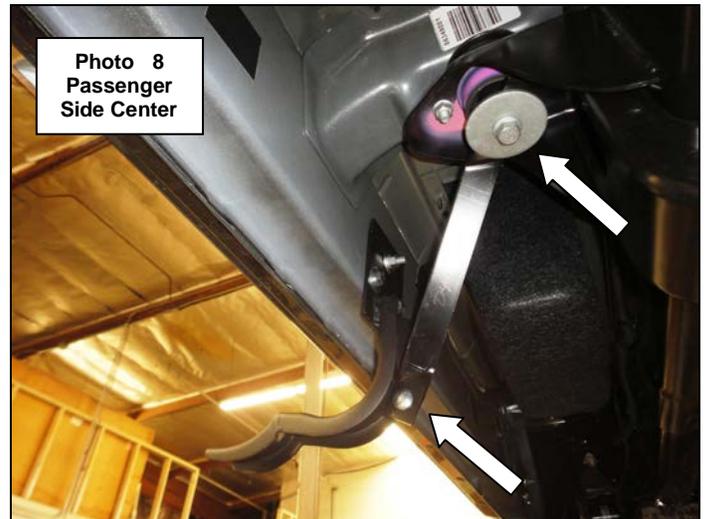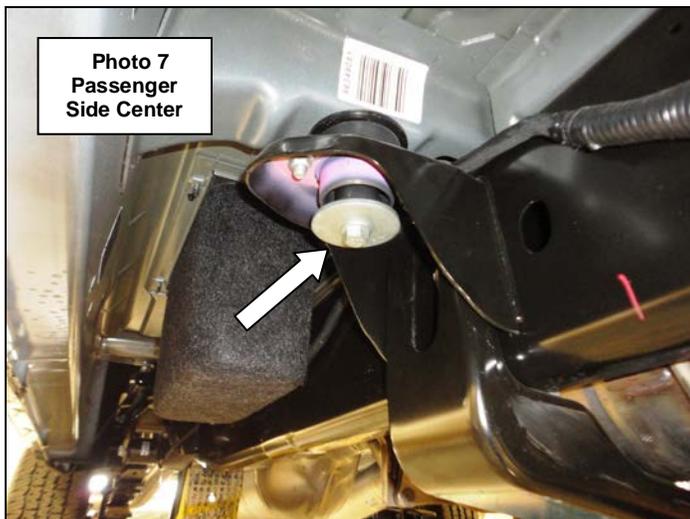

Step-8 Repeat the above steps to install the passenger side rear auxiliary bracket, (**Photo 9 & 10**).

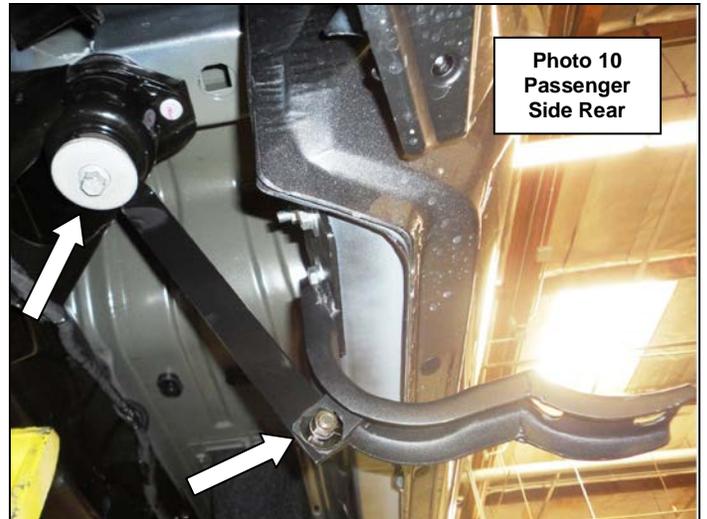

Step-9 Attach the passenger side step to each of the brackets using (2) 5/16" x 1" hex bolts, (2) 5/16" lock washers and (2) 3/8" flat washers, (**Illustration 1**).

Step-10 Align the side step with the vehicle and tighten all factory, side step and bracket nuts and bolts. Repeat the installation steps to install the driver side brackets and side step. Remember to check and retighten all nuts and bolts periodically.

