


Parts List				
Item	Qty.	Code	Description	Max. Torque
<b>1 Kit D44151 DOMINATOR IV</b>				
1	1 Set	D44150AA-0BA	Side bar Dominator IV	-
<b>1 Kit BRK-D44-150 Hardware brackets kit</b>				
2	6 Piece	D44-1690CA	Main bracket	-
3	1 Set	D44-1262AA	Front auxiliary bracket	-
4	2 Piece	D44-1262BA	Middle auxiliary bracket A	-
5	2 Piece	D44-1261AA	Middle auxiliary bracket B	-
6	1 Set	D44-1504AA	Rear auxiliary bracket	-
7	6 Piece	3912670CA	3/8" threaded rod plate	30 Lb.ft
<b>1 Kit KTE-D44-150 Hardware bolts kit</b>				
8	12 Piece	-	5/16" x 1" Hex head bolt	24 Lb.ft
9	12 Piece	-	5/16" Lock washer	-
10	32 Piece	-	3/8" Flat washer	-
11	4 Piece	-	2 1/2 x 5/16" vinyl gasket	-
12	6 Piece	-	3/8 x 1" Hex head bolt	30 Lb.ft
13	14 Piece	-	3/8 x 1" Carriage head bolt	30 Lb.ft
14	20 Piece	-	3/8" Lock washer	-
15	14 Piece	-	3/8" Hex nut	30 Lb.ft
16	6 Piece	-	3/8" Clip nut	30 Lb.ft
17	6 Piece	-	3/8" Flat washer. Zinc plated	-
18	6 Piece	-	3/8" Lock washer. Zinc plated	-
19	6 Piece	-	3/8" Hex nut. Zinc plated	30 Lb.ft


Required Tools (Not included)	
Qty.	Description
1	1/2" Socket & 1/2" Wrench
1	9/16" Socket & 9/16" Wrench
1	Ratchet
1	Extension

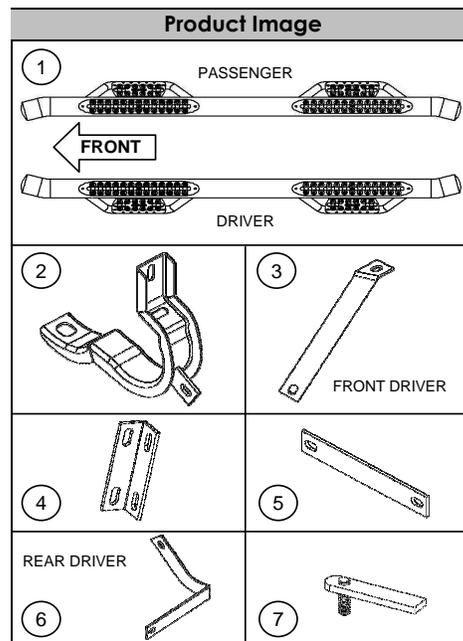

**Instructions**

- 1.- Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
- 2.- To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. We recommend to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
- 3.- The approximate installation time is 45 min.
- 4.- Locate the holes placed inside the rocker panel of the vehicle, front, middle and rear, place a clip nut in the upper. **SEE PICTURE 1, ILLUSTRATION 1.**
- 5.- Put the bracket and attach the 3/8" clip nut with: 3/8 x 1 1/4" hex head bolt, 3/8" flat and lock washer. **NOTE 1: In the middle part insert a 3/8" bolt plate and vinyl gasket and attach with: 3/8" flat and lock washer, 3/8" hex nut.** In the lower part for each bracket attach with: 3/8 x 1" carriage head bolt, 3/8" flat and lock washer, 3/8" hex nut. **SEE ILLUSTRATION 2 & 3.** Leave loose.

**PICTURE 1.**

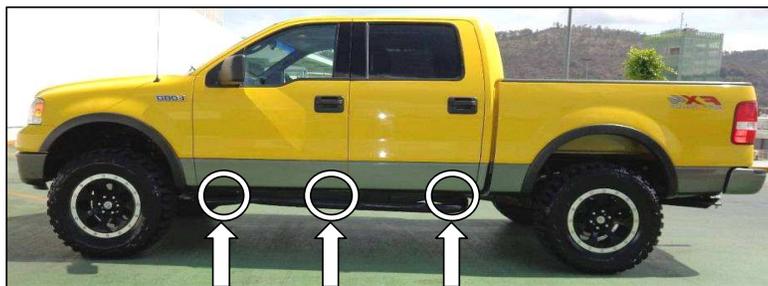

In this part, install each bracket on driver side.

**ILLUSTRATION 1.**


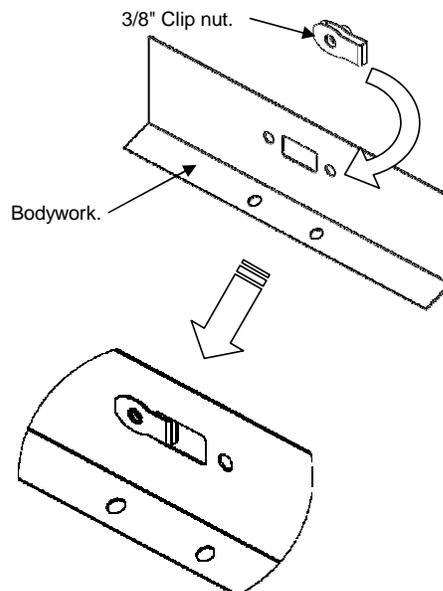


ILLUSTRATION 2.

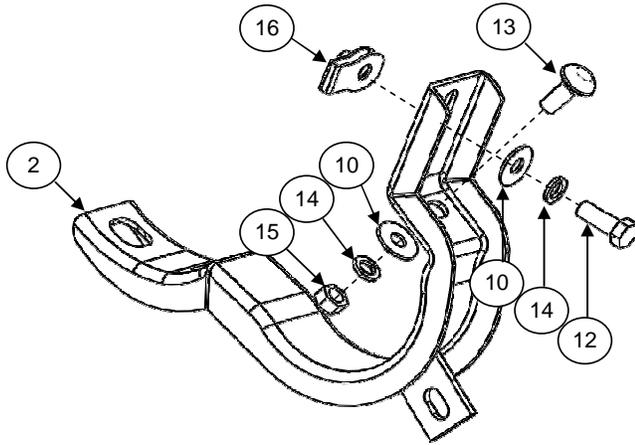

9/16" Use ratchet and socket.

**NOTE: Use this configuration front and rear.**

6.- Locate on the front hole in the top of the bracket installed and insert the 3/8" threaded rod plate. **Note: In some models have a plastic plug, remove it and other has a label stuck inside, need to push hard the 3/8" threaded rod plate.** Place the front auxiliary bracket and attach with: 3/8" flat and lock washer, 3/8" hex nut. On the other end of the bracket attach to the main bracket: 3/8" carriage head bolt, 3/8" flat and lock washer, 3/8" hex nut. Leave loose. **SEE PICTURE 2 & ILLUSTRATION 4.**


PICTURE 2.



Insert the 3/8" threaded rod plate in the hole as shown.

ILLUSTRATION 4.

9/16" Use ratchet and socket.

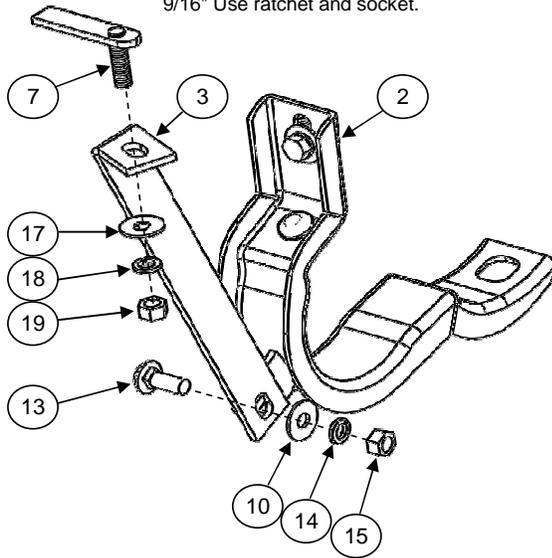


PICTURE 3.



Insert the 3/8" threaded rod plate in the hole as shown. Place the middle auxiliary bracket A and attach with 3/8" bolts.


7.- Locate in the middle part hole on one side of the frame and insert 3/8" bolt plate ( place a vinyl gasket on the bolt to prevent it from falling inside the frame ), install the middle auxiliary bracket and attach with: 3/8" flat and lock washer, 3/8" hex nut, the other end attach to the main bracket with: 3/8" carriage head bolt, 3/8" flat and lock washer, 3/8" hex nut. Leave loose. **SEE PICTURE 3 & ILLUSTRATION 5.**

ILLUSTRATION 5.

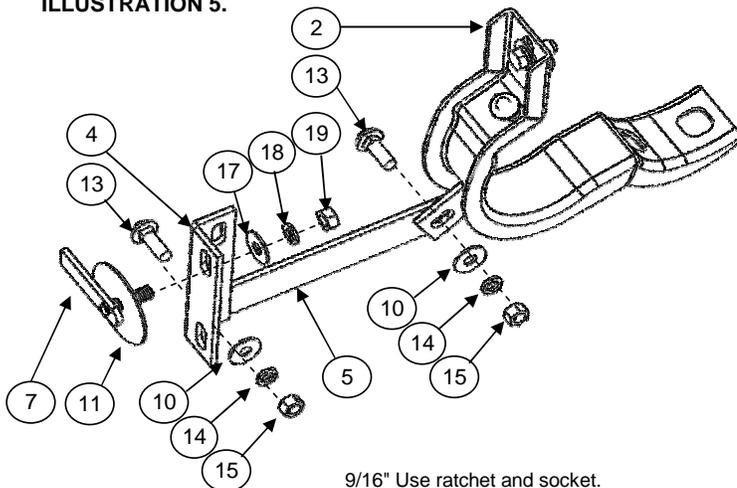

9/16" Use ratchet and socket.


PICTURE 4.

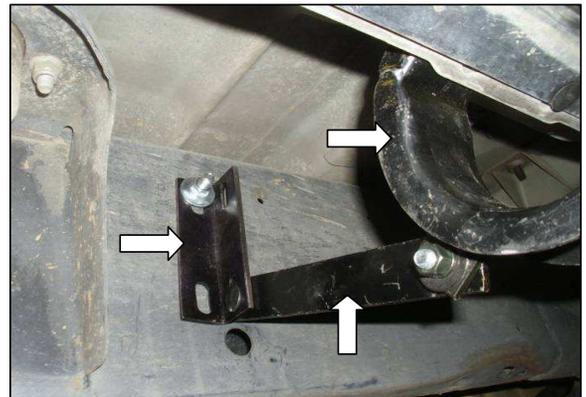

Shows the central bracket assembly. Picture passenger side.

8.- Locate in the rear part hole on one side of the frame and insert 3/8" threaded rod plate. ( place a vinyl gasket on the bolt to prevent it from falling inside the frame ), install the rear auxiliary bracket and attach with: 3/8" flat and lock washer, 3/8" hex nut, the other end attach to the main bracket with: 3/8" carriage head bolt, 3/8" flat and lock washer, 3/8" hex nut. Leave loose. **SEE PICTURE 4 & ILLUSTRATION 6.**

**ILLUSTRATION 6.**

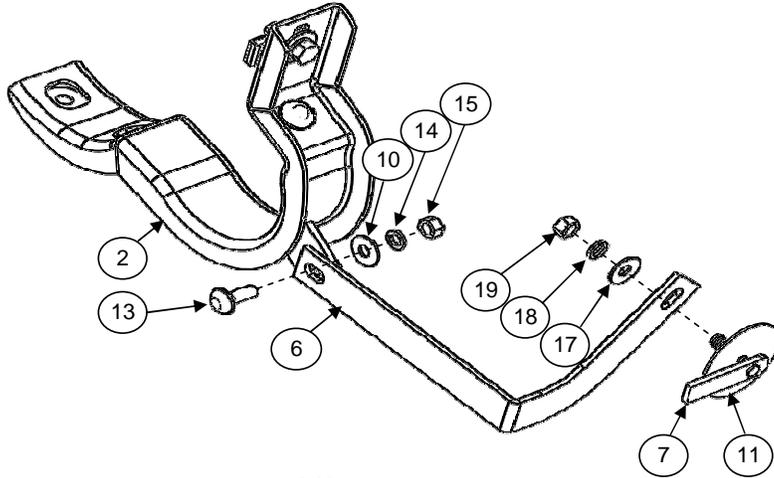

9/16" Use ratchet and socket.

**PICTURE 5.**



Shows the rear bracket assembly. Picture passenger side.


9.- Place the side bar to the brackets and attach with: 5/16 x 1 1/4" hex head bolt, 3/8" flat washer, 5/16" lock washer. For each bracket. Leave loose. **SEE ILLUSTRATION 7.**

10.- Make any final adjustments to the alignment of the bracket and tighten all bolts.

**Repeat the above steps to install the passenger side.**

11.- Periodically check your product because it may need a re-tighten of bolts.

**ILLUSTRATION 7.**

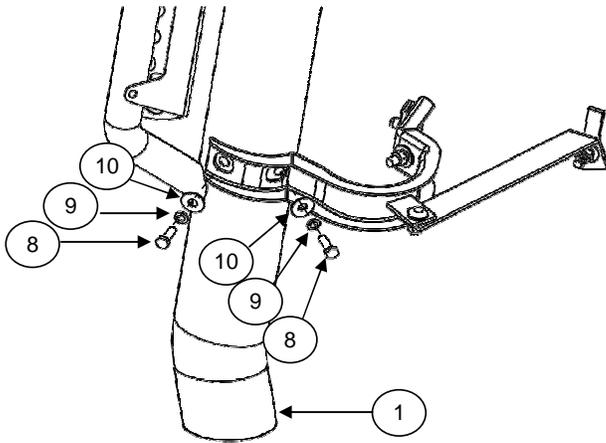

1/2" Use ratchet and socket.

**PICTURE 5.**



**DOMINATOR IV INSTALLED, DRIVER SIDE.**