# INSTALLATION INSTRUCTIONS 37019-1 ONE PIECE SIDEBAR 37019-2 MODULAR SIDEBAR 2003 Hummer H2

### Parts List :

QTY (1) Sidebar Set (1) □Hardware kit including : (12) 3/8 x 1 1/4" Hex. head bolts (24) 3/8" Flat washers (12) 3/8" Lock nuts

#### Modular Sidebar version includes extra :


- (4) Front/Rear mounting brackets
- (2) Middle mounting brackets
- (12) 3/8 x 1 1/4" hex head bolt
- (12) 3/8" Flat washers(12) 3/8" Lock washers

### Tools Required :

9/16" Socket Ratchet

#### Instructions :

- 1.- Read and understand instructions completely before beginning installation.
- 2.- Installation only with Rocker bars.
- 3.- Sidebar set consist of a driver and passenger side. **Note:** To determinate the correct side of the sidebar be sure the rear plastic step is the closest to the end of the tube.
- 4.- Only modular sidebar version. Bolt front/rear mounting brackets to the sidebar using 3/8 x 1 1/4" hex head bolts, flat and lock washers. Use first and the last set of mounting bracket holes in the sidebar. Leave loose. Note: The mounting brackets have horizontal mounting holes in the upper flange.
- 5.- Only modular sidebar version. Bolt middle mounting brackets to the sidebar using 3/8 x 1 1/4" hex head bolts, flat and lock washers. Leave loose. Note: The middle mounting brackets have vertical mounting holes in the upper flange.□
- 6.- Place the sidebar up to the vehicle and align the mounting holes in the sidebar brackets with the holes in the vehicle. Bolt using 3/8 x 1 1/4" hex head bolts, double flat washers and lock nuts. Leave hardware loose.□
- 7.- Make any final adjustments to the aligment of the sidebar and tighten all bolts.  $\square$
- 8.- You may need to periodically re-tighten the bolts.

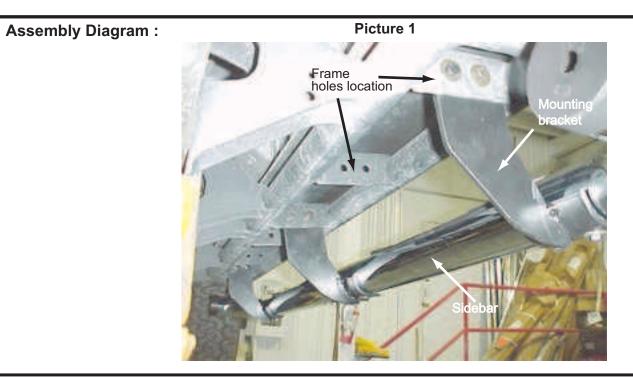

## Cleaning and care instructions :

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scracht the finish and cause corrosion.