

INSTALLATION INSTRUCTIONS
4098 (B - C - PS) / 37124 (1 - 2 - 3 - 4 - 8 - 9) SIDE BAR
DODGE RAM MEGA CAB. 1500/2500 (06 - 08)

Parts List:	(1) Hardware kit including:
QTY	(4) 1/2" flat washer
(1) Side Bar set (Driver & Passenger)	(4) 1/2" lock washer
(4) Brackets (Driver & Passenger)	(4) 1/2 x 2" Hex. Head bolt
(1) Auxiliary rear bracket set	(12) 3/8" flat washer
(1) Auxiliary front bracket set	(12) 3/8" lock washer
(1) Central brackets set	(10) 3/8" Hex. Nut
(10) Bolt plate	(2) 3/8 x 1" Hex. Head bolt
	(6) Vinyl gaskets

Tools required:


3/4" Socket	9/16" Socket	Ratchet
3/4" Wrench	9/16" Wrench	Ratchet extension

Instructions:

Approximated installation time: 35 min.

1. Read and understand completely before beginning the installation.
2. The sidebar set consists in passenger and driver side. Be sure to determinate every side correctly before installing, the bent closest path is the front part.
3. Locate and remove the protectors, that are located in the front, central and rear part of the vehicle, below the cabinet, for brackets installation, as shown in Picture 1y 2.
4. To install front and rear brackets, insert (1) vinyl gasket to (1) bolt plate, then place the bolt plates inside the slots on the panel where the protectors were removed. (this will not allow the bolts fall into the rocker panel).
5. Insert one bolt plate in the rectangle hole at side of the front and rear rocker panel support.

Picture 1

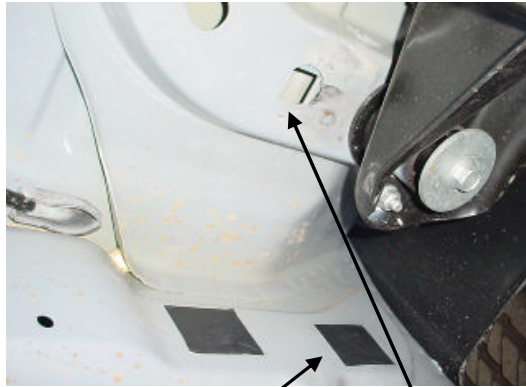

Remove this protector , to insert the boot with plate for front bracket installation. Picture front driver side.

Picture 2



Remove this protector , to insert the boot with plate for rear bracket installation. Picture rear driver side.

Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax,(e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause

INSTALLATION INSTRUCTIONS

4098 (B - C - PS) / 37124 (1 - 2 - 3 - 4 - 8 - 9) SIDE BAR DODGE RAM MEGA CAB. 1500/2500 (06 - 08)

6. Mount the front bracket to the bolt plate in the holes without protector and tighten with: (1) 3/8" flat and lock washers, (1) 3/8" hex nut. Leave loose. Picture 3.
7. Install the front auxiliary bracket on the bolt plate in the rectangle hole and tighten with: (1) 3/8" flat and lock washers, (1) 3/8" hex nut. Leave loose. Picture 4.


Picture 3



Front bracket installed

Auxiliary front bracket installed.
Driver side picture.


Picture 4

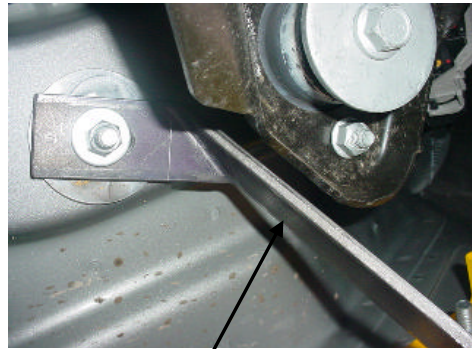

Install the auxiliary brackets avoiding contact with the frame. Driver side picture

8. Mount the rear bracket to the bolt plate in the holes without protector and tighten with: (1) 3/8" flat and lock washers, (1) 3/8" hex nut. Leave loose. Picture 5.
9. Install the rear auxiliary bracket on the bolt plate in the rectangle hole and tighten with: (1) 3/8" flat and lock washers, (1) 3/8" hex nut. Leave loose. Picture 5.

Picture 5

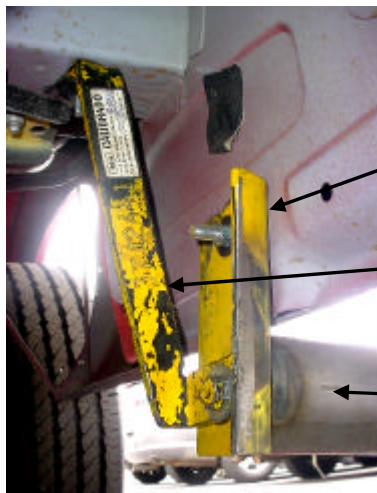

Rear bracket installed. Driver side picture.

Auxiliary rear bracket installed. Driver side picture.

Side Bar installed.

Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and

INSTALLATION INSTRUCTIONS

4098 (B - C - PS) / 37124 (1 - 2 - 3 - 4 - 8 - 9) SIDE BAR DODGE RAM MEGA CAB. 1500/2500 (06 - 08)

10. To install central bracket, remove the protector tape located in the middle of front and rear brackets. Insert (1) vinyl gasket to (1) bolt plate, then place the bolt plate with the gasket in the slot on the rocker panel where you remove the protector tape .
11. Mount the central bracket to the bolt plate in the holes without protector, attach with: (1) 3/8" flat and lock washers, (1) 3/8" hex nut. Leave loose. Picture 6.

Picture 6



Central Bracket installed.
Passenger side picture.

11. Mount the sidebar to the front and rear brackets, tighten using (1) 1/2" x 2" hex. head bolt, (1) 1/2" flat and lock washer for each bracket. Leave loose.
12. Fix central bracket to side bar with: (1) 3/8 x 1" hex. head bolt, (1) 3/8" flat and lock washer. Leave loose.
13. Make any final adjustments to the alignment of the sidebar and tighten all bolts. Repeat for the opposite side.
14. You may need to periodically re-tighten the bolts.



SIDE BAR INSTALLED. DRIVER SIDE PICTURE

Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause