

INSTALLATION INSTRUCTIONS


Brackets

Ram 1500

526245 / 55665

Parts list

Item	Qty.	Part No.	Description	Torque
1	1 set	526240AA	Main Bracket	
2	1 set	526244BA	Auxiliary Bracket	
3	4 pcs	524760AA	1/2" Tab Bolt	16 Lb Ft
4	4 pcs		1/2" Flat washer	
5	4 pcs		1/2" Lock washer	
6	4 pcs		1/2" Hex. nut	16 Lb Ft
7	2 pcs		3/8"x 1" Hex Head Bolt	18 Lb Ft
8	4 pcs		3/8"x 1" Carriage Head Bolt	18 Lb Ft
9	6 pcs		3/8" Flat washer	
10	6 pcs		3/8" Lock washer	
11	6 pcs		3/8" Hex. nut	18 Lb Ft

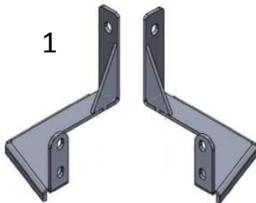


Required tools:

- A. Ratchet
- B. 1/2", 3/4 & 9/16" Socket
- C. 10 mm, 1/2", 3/4" & 9/16" Wrench
- D. Ratchet extension

Before beginning the installations read all instructions carefully and verify that all the hardware is accounted for. If there are any listed part missing please notify your distributor immediately.


To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. We recommend using only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.

The approximated installation time is 45 min.

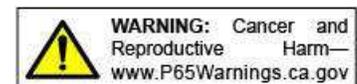


NOTE: This installation requires cutting or removal of the air dam.


1. Beginning with the driver side loosen the (2) bolts that attach the tow hook to the frame. Image 1. Access the bolts from underneath the vehicle.
2. Slide the main bracket into place between the tow hook and the frame. Image 2. Leave the tow hook bolts loose.

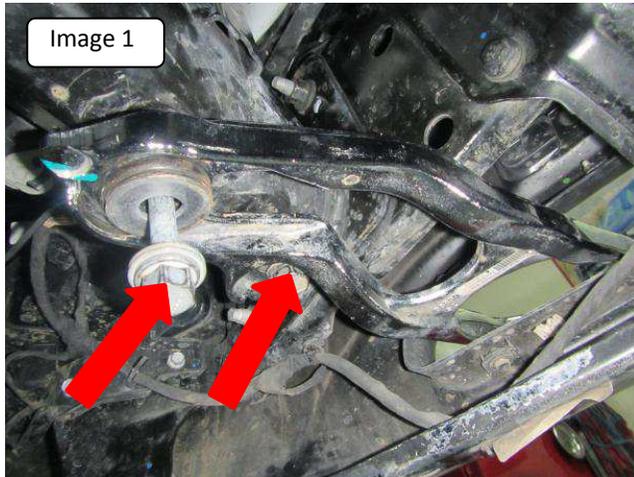

3. Place (2) 1/2" tab bolts from front of the main bracket to rear. Secure the main bracket to the bumper support using (2) 1/2 hex nuts, (2) 1/2" flat washers and (2) 1/2" lock washers. Image 3 & 4. **Note:** Leave the nuts loose for final adjustment.

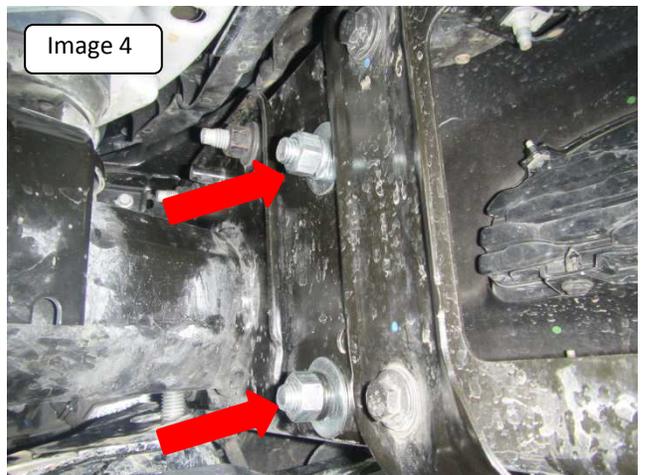

4. Remove the air dam by removing the bolts and push pin rivets. Image 5 y 6.

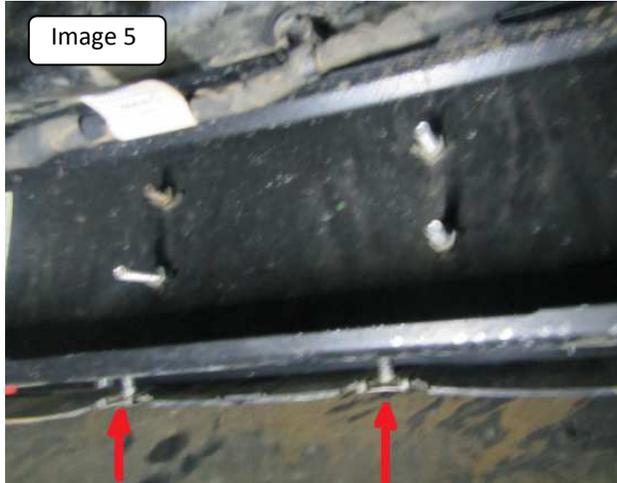

5. Locate and remove the factory bolt shown. Place auxiliary mounting bracket and secure usgin the bolt removed. Do not tighten. Image 7 y 8.



6. Repeat above steps to install the passenger side brackets.

7. Cut out the air dam to allow auxiliary brackets extend through. Image 9. Reinstall the air dam.



8. Attach the RC2 to the main brackets using (2) 3/8" x 1" carriage head bolts, (2) 3/8" flat washers, (2) 3/8" lock washers and (2) 3/8" hex nuts. Image 10. Secure to the auxiliary bracket using (1) 3/8" x 1" hex bolt, (1) 3/8" flat washer y (1) 3/8" lock washer. Image 11.



9. Align the RC2 with the front of vehicle and tighten all bolts and nuts.
10. Remember retighten all nuts and bolts every six months.

