

**INSTALLATION INSTRUCTIONS**  
**37324 ( 1 - 3 - 4 ) SIDE BAR**  
**DODGE RAM MEGA CAB 1500/2500 06 - 09**


**Parts List:**

ITEM	QTY.	CODE	DESCRIPTION	TORQUE MAX.
1	1	376248AA-8CA	Front side bar set	-
2	1	376248BA-8DA	Rear side bar set	-
	<b>1</b>	<b>BRK-37724</b>	<b>Brackets kit includes:</b>	
3	4	3712422	Front / Rear mounting brackets	-
4	1	3712440	Front auxiliary mounting brackets set	-
5	1	3712421	Rear auxiliary mounting brackets	-
6	1	3712441	Central mounting brackets set	-
7	10	372413	Bolt plate	30 Lb.Ft
	<b>1</b>	<b>KTE-37724</b>	<b>Hardware kit includes:</b>	
8	4	-	1/2 x 2" Hex head bolt zinc plated	75 Lb.Ft
9	4	-	1/2" Flat washer zinc plated	-
10	4	-	1/2" Lock washer zinc plated	-
11	2	-	3/8 x 1" hex head bolt zinc plated	30 Lb.Ft
12	12	-	3/8" lock washer zinc plated	-
13	12	-	3/8" flat washer zinc plated	-
14	10	-	3/8" hex nut zinc plated	30 Lb.Ft
15	6	-	Vinyl gaskets	-

**Required Tools (not included)**

DESCRIPTION	QTY
9/16" Socket / wrench	1
3/4" Socket / wrench	1
Ratchet	1
Ratchet extension	1

**ILLUSTRATION 1**

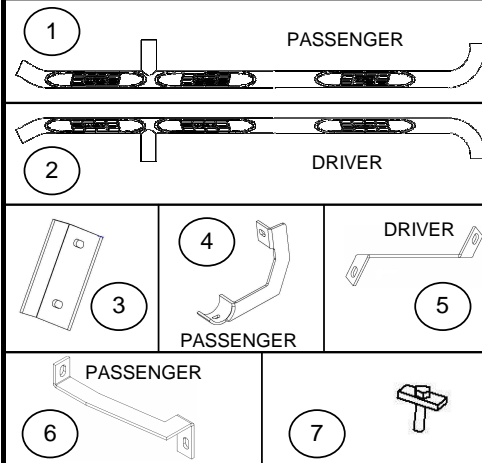


**Approximate installation time: 40 min.**


**Instructions:**

1. Before beginning the installation, please read all directions carefully and verify all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.

**PICTURE 1**

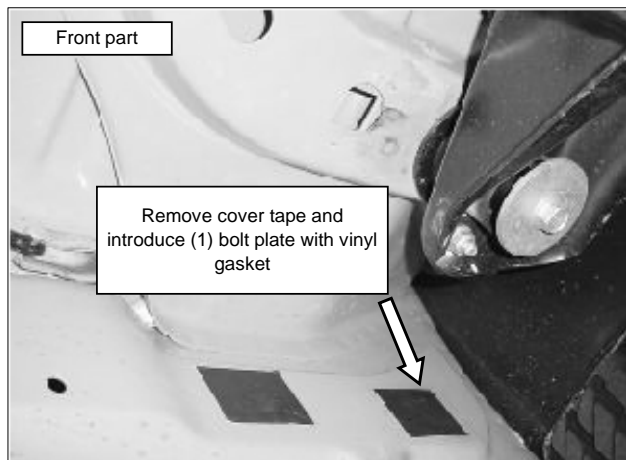

**PICTURE 2**

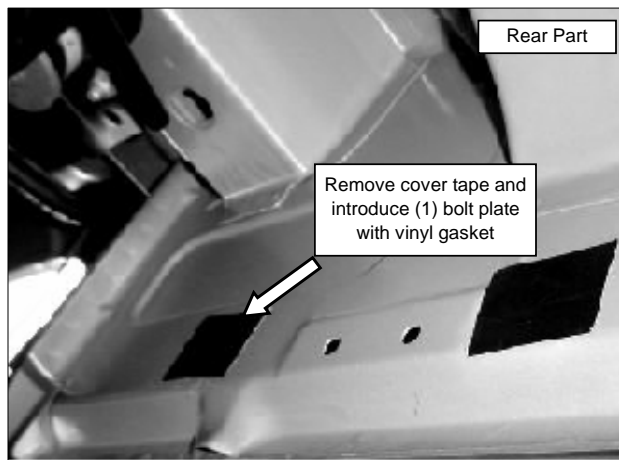

2. Locate in the rocker panel the holes covered in tape and remove the tape. **See picture 1 & 2.** Place (1) vinyl gasket to the bolt plate then insert into the exposed hole. **NOTE:** It is important to place vinyl gaskets to the bolts to prevent the bolt plate from falling into the rocker panel.

**Cleaning and care instructions:**

Design:

Quality:


Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

**INSTALLATION INSTRUCTIONS**  
**37324 ( 1 - 3 - 4 ) SIDE BAR**  
**DODGE RAM MEGA CAB 1500/2500 06 - 09**


3. Place (1) front mounting bracket attach to the bolt plate previously placed using: (1) 3/8" flat and lock washers and 3/8" hex nut. . Leave loose. **Picture 3.** Repeat the procedure to install rear mounting bracket.

4. To install auxiliary front mounting bracket, locate existing hole next to the chassis support and introduce (1) bolt plate. Place auxiliary front mounting bracket and secure using (1) 3/8" flat and lock washers and (1) 3/8" hex nut. **See picture 4.** Leave loose.

**PICTURE 3**

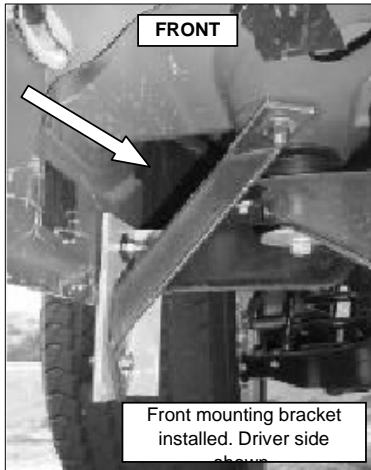

**PICTURE 4**

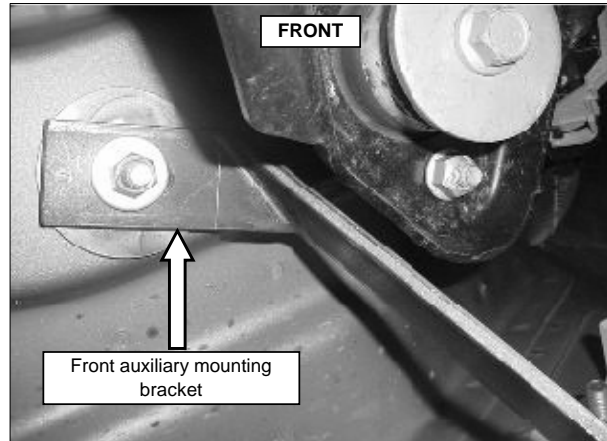

5. To install auxiliary rear mounting bracket, locate existing hole next to the chassis support. Introduce (1) bolt plate then place rear auxiliary mounting bracket and secure to the bolt plate previously placed using (1) 3/8" flat and lock washers and 3/8" hex nut. Leave loose. **Picture 5.**

**PICTURE 5**



**Cleaning and care instructions:**

Design:


Quality:

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.

**INSTALLATION INSTRUCTIONS**  
**37324 ( 1 - 3 - 4 ) SIDE BAR**  
**DODGE RAM MEGA CAB 1500/2500 06 - 09**

6. To install central mounting bracket, locate in the middle of rocker panel the hole covered in tape and remove the tape. Introduce (1) bolt plate with vinyl gasket then place central mounting bracket and secure to the bolt previously placed using (1) 3/8" flat and lock washers and 3/8" hex nut. Leave loose. **Picture 6.**

**PICTURE 6**

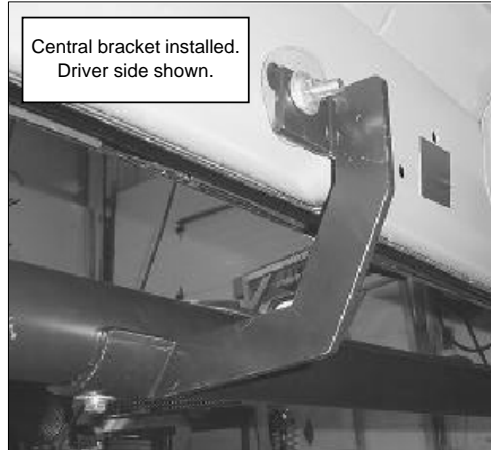

7. Place wheel to wheel to the mounting brackets and secure to the front & rear using ( 1 ) 1/2 x 2" hex head bolt, and ( 1 ) 1/2" flat and lock washers by each bracket. Secure to the central mounting bracket using (1) 3/8 x 1" hex head bolt, and (1) 3/8" flat and lock washers. Do not tighten yet. **NOTE:** Using the 1/2" bolt secure main mounting brackets and auxiliary mounting brackets to the side bar.

8. Align the side bar to the vehicle and tighten all hardware. Finally place a plastic plug into the hole of the tube's joint.

9. Repeat for the other side of vehicle.

10. Fill out the warranty card included and place it inside your vehicle.

**Cleaning and care instructions:**

**Design:**

**Quality:**

Keep your product clean. Do not use abrasive cleaners or polish. We recommend only non-abrasive automotive wax such as pure carnauba to avoid scratches or rust.